

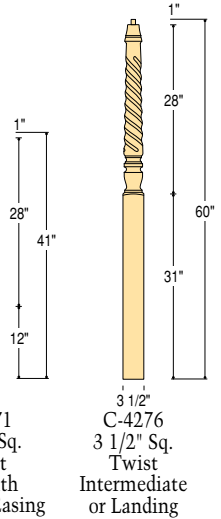









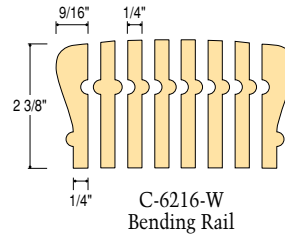
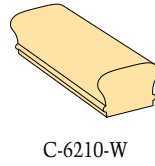
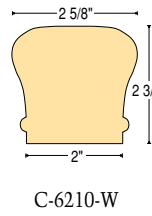



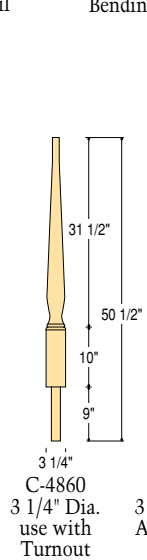



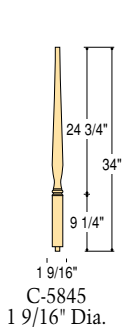
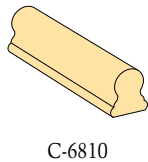



VICTORIAN OVER-THE-POST

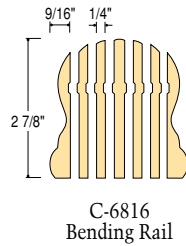

— Newel top diameter is 2-3/16" —

ART DECO OVER-THE-POST

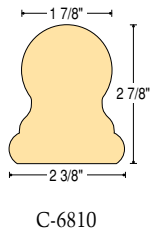

— Newel top diameter is 1-1/8" —



NOTE: Placement of Art Deco Newels will sometimes differ from standard newel locations because of the contemporary styling of the Art Deco fittings.